


	M
ノトレ	Da 2 (
StyleFinishDoorware	Sc 1.

	Drawing M20.10.150.300	
	Date 20/09/2023	
	Scale 1:2	

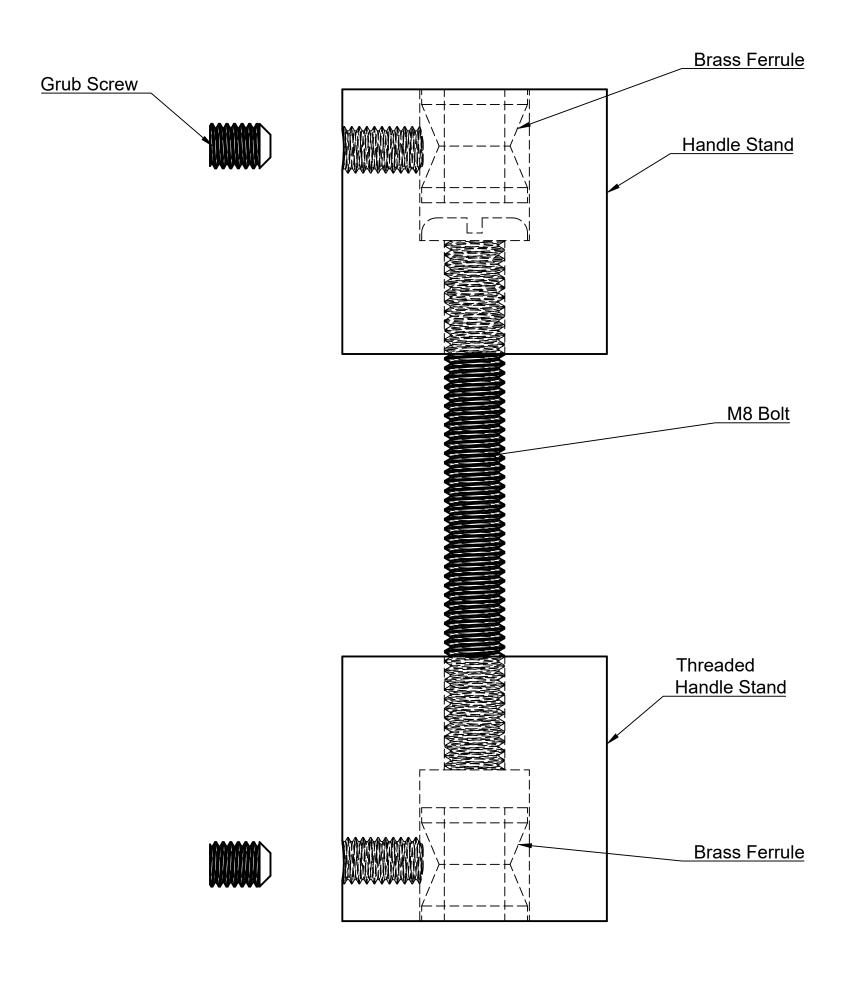

Installation Instructions

IMPORTANT! Mark and drill door from both sides.

Cut bolt to required length. Allow 30mm longer than door thickness.

Screw stands together through door.

Place handle on stand, inserting Ferrules into stand.

Tighten Grub Screws



Entrance Handle Fixing B2B

Date 2/02/2023




IMPORTANT! Mark and drill door from both sides.


Cut bolt to required length. Allow 15mm longer than door thickness.

Screw stands from behind to door.

Place handle on stand, inserting Ferrules into stand.

Tighten Grub Screws

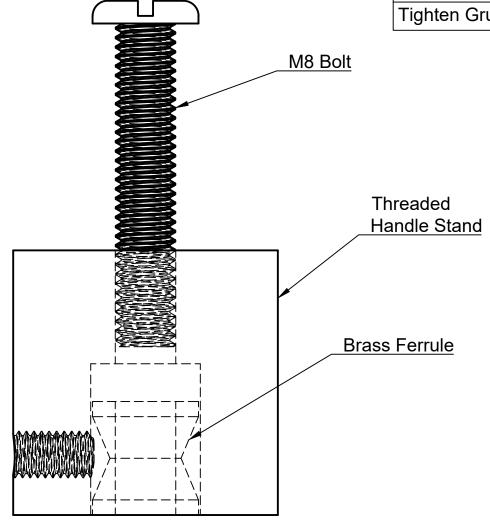





Entrance Handle Rear Fixing


Date 2/02/2023

Installation Instructions

Screw stand to door.

Place handle on stand, inserting Ferrules into stand.

Tighten Grub Screws

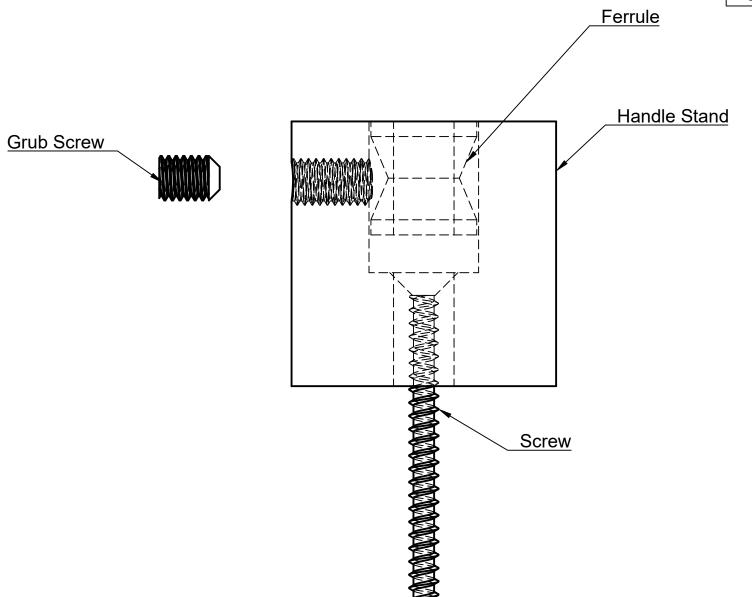

StyleFinishDoorware Scale 2:1

Entrance Handle Surface Fixing

Date 2/02/2023